
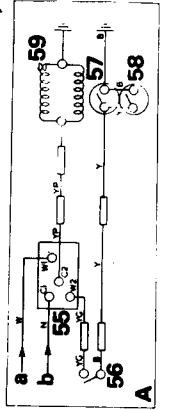


WIRING DIAGRAM - TR6
RIGHT HAND STEER

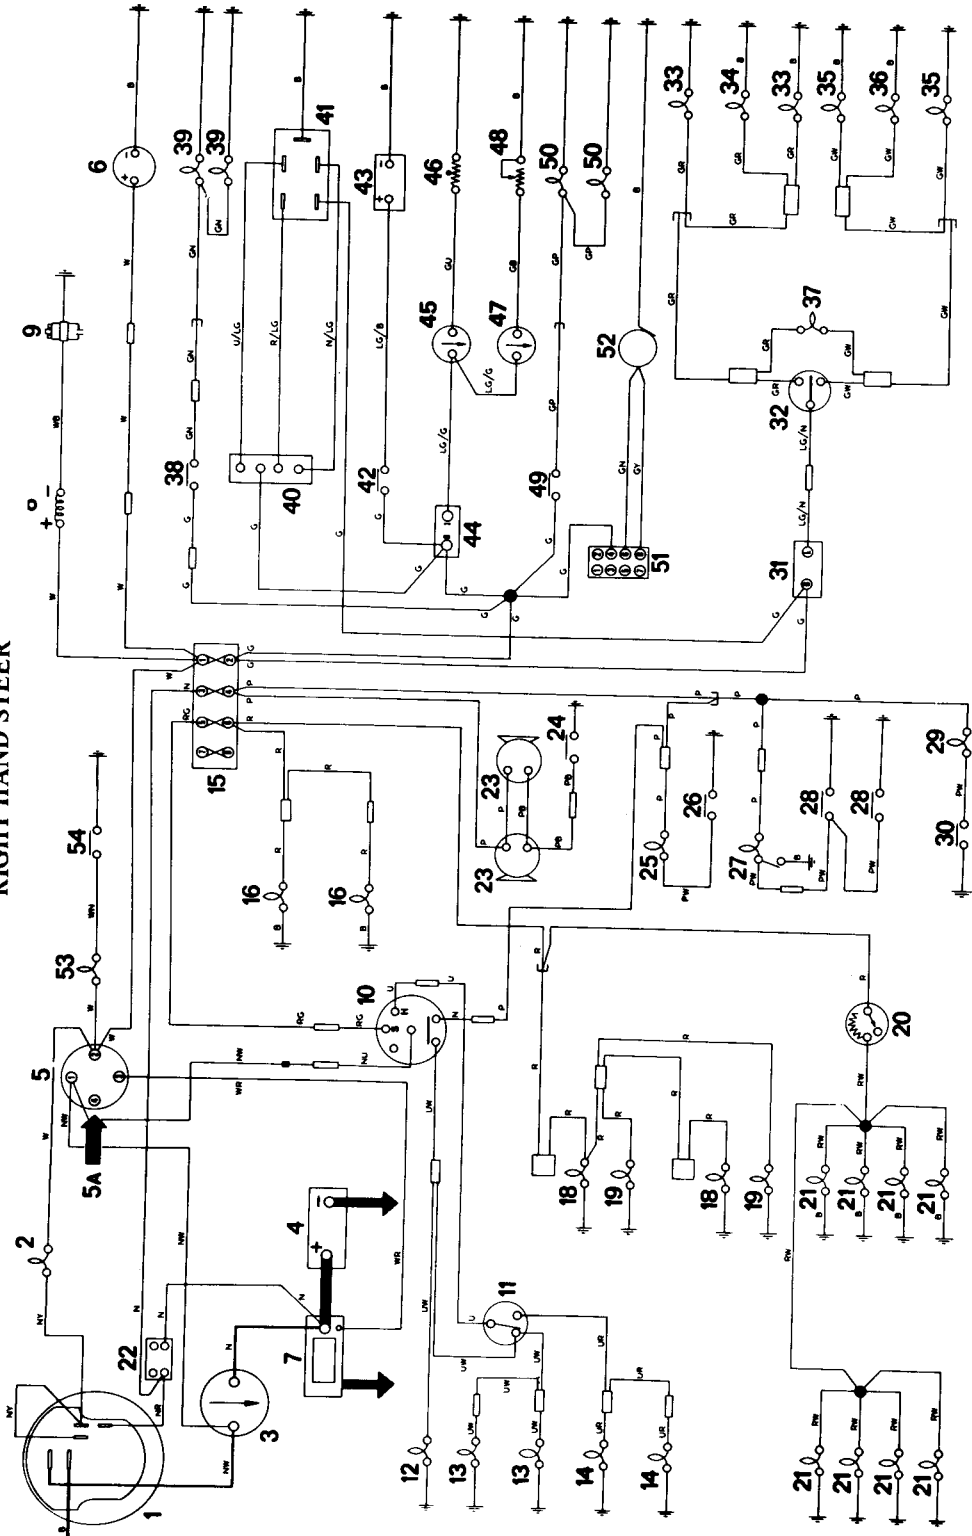


KEY TO WIRING DIAGRAM – TR6 RIGHT HAND STEER

1. Alternator	27. Transmission tunnel lamp	A	Overdrive (optional extra)
2. Ignition warning light	28. Transmission tunnel lamp door switch	55.	Overdrive relay
3. Ammeter	29. Luggage boot lamp	56.	Overdrive column switch
4. Battery	30. Luggage boot lamp switch	57.	Overdrive gearbox switch- 2nd gear ON
5. Ignition/starter switch	31. Turn signal flasher unit	58.	Overdrive gearbox switch- 3rd and 4th gear ON
5A. Ignition/starter switch – radio supply connector	32. Turn signal switch	59.	Overdrive solenoid
6. Petrol pump	33. L.H. Flasher lamp	a	From fuse box
7. Starter motor	34. L.H. Flasher repeater lamp	b	From fuse box
8. Ignition coil	35. R.H. Flasher lamp		
9. Ignition distributor	36. R.H. Flasher repeater lamp		
10. Column light switch	37. Turn signal warning light		
11. Dip switch	38. Reverse lamp switch		
12. Main beam warning light	39. Reverse lamp		
13. Main beam	40. Windscreen wiper switch		
14. Dip beam	41. Windscreen wiper motor		
15. Fuse box	42. Windscreen washer switch		
16. Front parking lamp	43. Windscreen washer pump		
	44. Voltage stabilizer		
	45. Temperature indicator		
18. Tail lamp	46. Temperature transmitter		
19. Plate illumination lamp	47. Fuel indicator		
20. Panel rheostat	48. Fuel tank unit		
21. Instrument illumination	49. Stop lamp switch		
22. Connector block	50. Stop lamp		
23. Horn	51. Heater switch		
24. Horn push	52. Heater motor		
25. Cubby box illumination	53. Oil pressure warning light		
26. Cubby box illumination switch	54. Oil pressure switch		

COLOUR CODE			
N.	Brown	LG.	Light Green
U.	Blue	W.	White
R.	Red	Y.	Yellow
P.	Purple	S.	Slate
G.	Green	B.	Black

WIRING DIAGRAM - TR6
U.S.A. - UP TO END OF 1971 MODEL YEAR

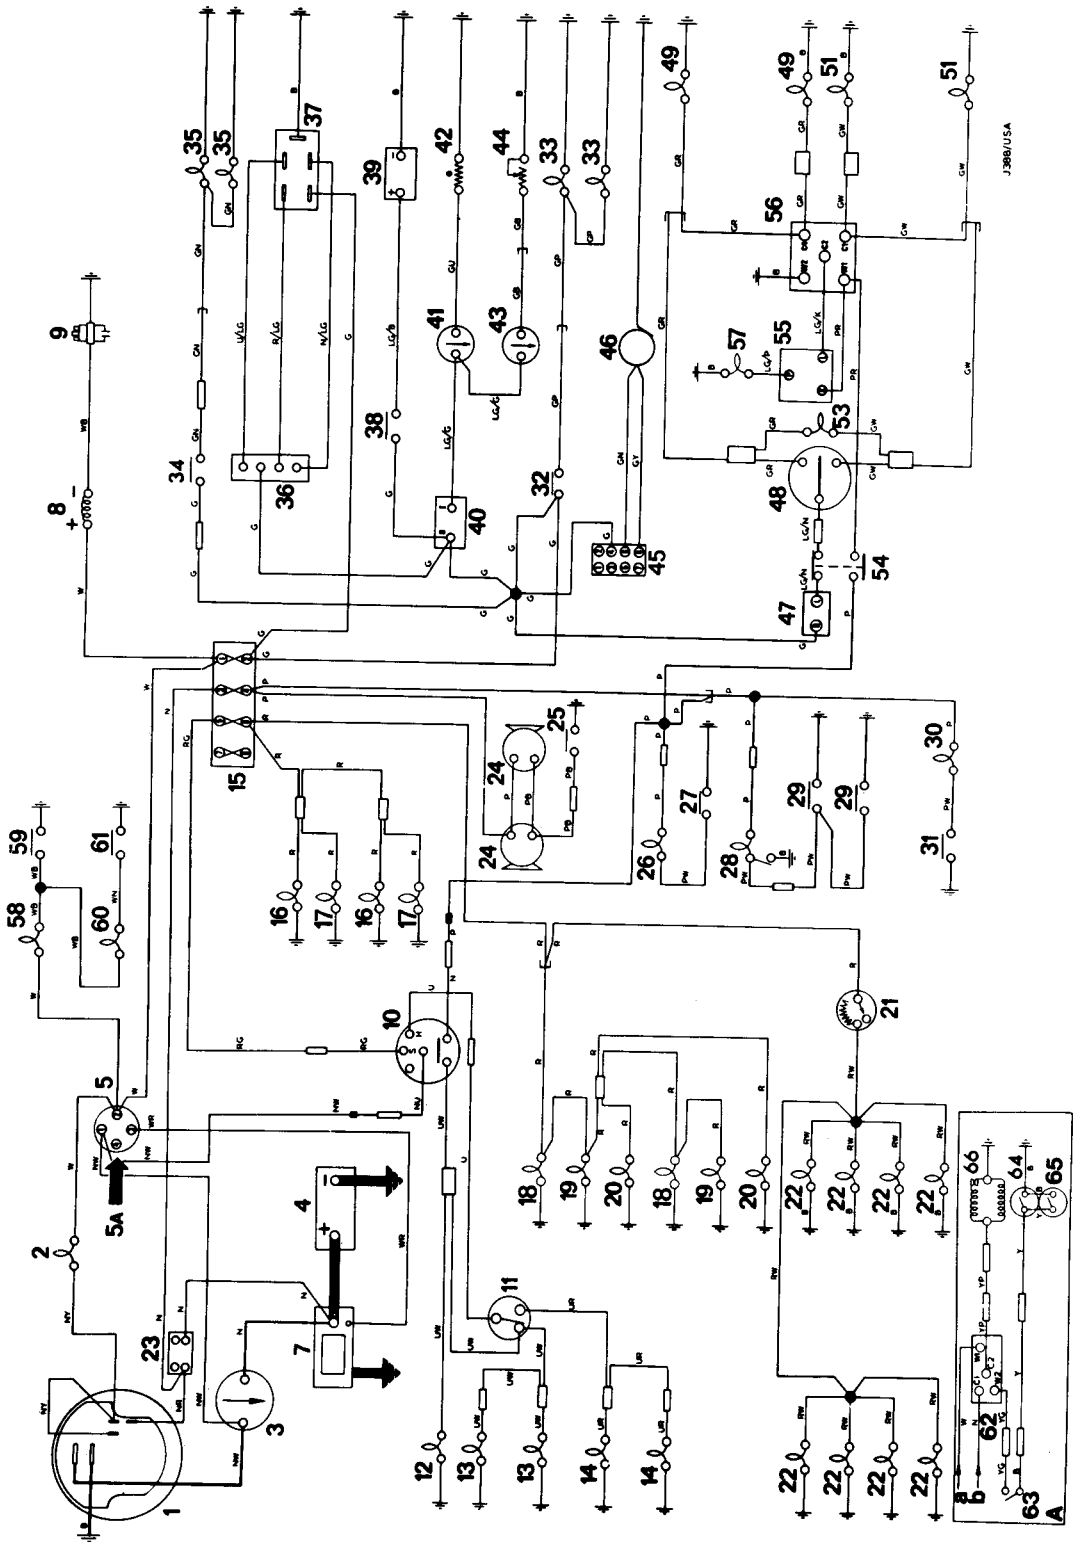

**KEY TO WIRING DIAGRAM – TR6.
U.S.A. – FROM INTRODUCTION OF 1972 MODEL YEAR**

1. Alternator	31. Luggage boot lamp switch	63. Buzzer
2. Ignition warning light	32. Stop lamp switch	64. Key switch
3. Ammeter	33. Stop lamp	65. Key light
4. Battery	34. Reverse lamp switch	66. Seat belt warning gearbox switch
5. Ignition/starter switch	35. Reverse lamp	67. Drivers belt switch
5A. Ignition/starter switch-radio supply connector	36. Windscreen wiper switch	68. Passengers seat switch
	37. Windscreen wiper motor	69. Passengers belt switch
	38. Windscreen washer switch	70. Seat belt warning light
7. Starter motor	39. Windscreen washer pump	71. Diode
8. Ignition coil	40. Voltage stabilizer	
9. Ignition distributor	41. Temperature indicator	
10. Column light switch	42. Temperature transmitter	A. Overdrive (optional extra)
11. Dip switch	43. Fuel indicator	72. Overdrive relay
12. Main beam warning light	44. Fuel tank unit	73. Overdrive column switch
13. Main beam	45. Heater switch	74. Overdrive gearbox switch – 2nd gear ON
14. Dip beam	46. Heater motor	75. Overdrive gearbox switch – 3rd and 4th gear ON
15. Fuse box	47. Turn signal flasher unit	76. Overdrive solenoid
16. Front parking lamp	48. Turn signal switch	
17. Front marker lamp	49. L.H. Flasher lamp	a. From fuse box
18. Rear marker lamp	51. R.H. Flasher lamp	b. From fuse box
19. Tail lamp	53. Turn signal warning light	
20. Plate illumination lamp	55. Hazard flasher unit	
21. Panel rheostat	56. Hazard switch	
22. Instrument illumination	57. Hazard warning light	
23. Horn relay	58. Brake line failure warning light	
24. Horn push	59. Brake line failure switch	
25. Horn	60. Oil pressure warning light	
26. Cubby box illumination	61. Oil pressure switch	
27. Cubby box illumination switch	62. L.H. door switch	
28. Transmission tunnel lamp		
29. Transmission tunnel lamp door switch		
30. Luggage boot lamp		

COLOUR CODE

N.	Brown	LG.	Light Green
U.	Blue	W.	White
R.	Red	Y.	Yellow
P.	Purple	S.	Slate
G.	Green	B.	Black